



4. Close the access door.

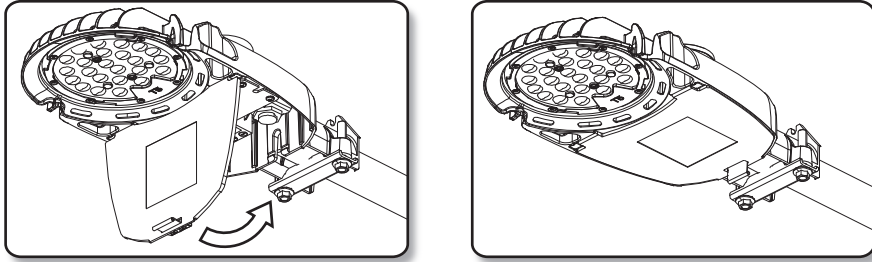

5. Make sure the luminaire is installed properly.

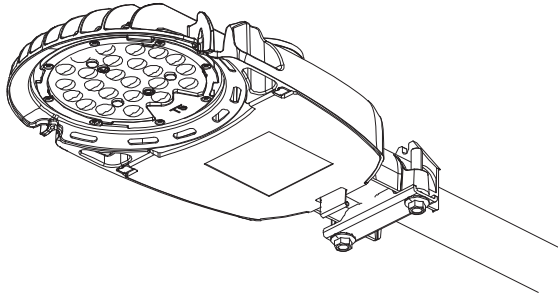

6. Power on for the test.



# EOI LED Light Sentinel Series

## Installation Guide


### Installation Instructions

Verify the supply voltage before the installation.

Make all electrical and grounded connections in accordance with the National Electrical Code (NEC) and any applicable local code requirements.

Installation and service of luminaires should be performed by a qualified licensed electrician.



The applicable diameter of arm is 1-5/8" to 2-3/8".

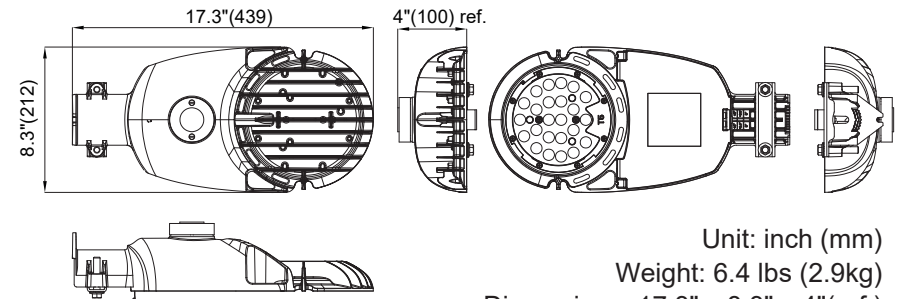

Unit: inch (mm)  
Weight: 6.4 lbs (2.9kg)  
Dimensions: 17.3" x 8.3" x 4"(ref.)

**1A. Pipe Mount:**





- Install the luminaire to the arm.
- Tighten the clamp bolts to 10.3~12 ft-lbs (14-16 N\*m).

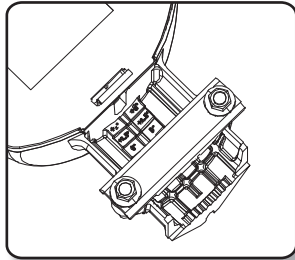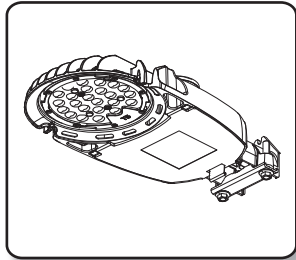


\* 3-steps mounting allows a 0 ~ +5° vertical tilt-adjustable arm holder with an increment of 2.5° each step.

**1B. Wall Mount:**




- With a power cord pulled through 1/2" conduit hole 6" to 8".
- Use a suitable listed fitting for conduit connection in accordance with the National Electrical Code (NEC).
- Mount the bracket to the vertical wall surface.
- Install the luminaire to the bracket.

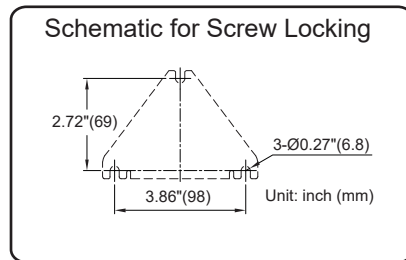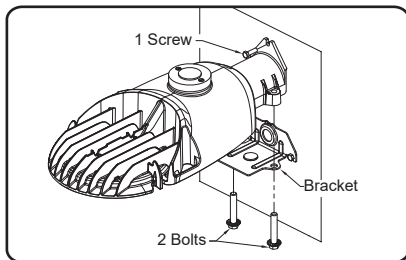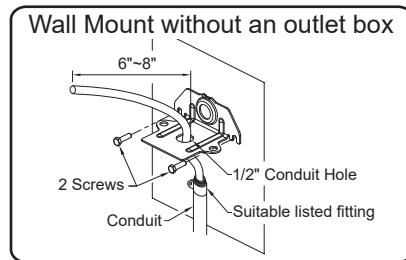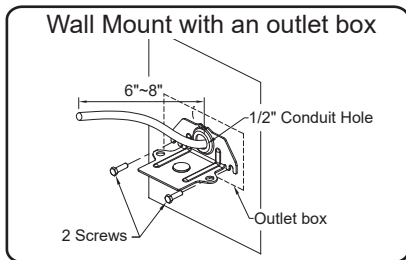

**2. Press the metal spring and open access door.**

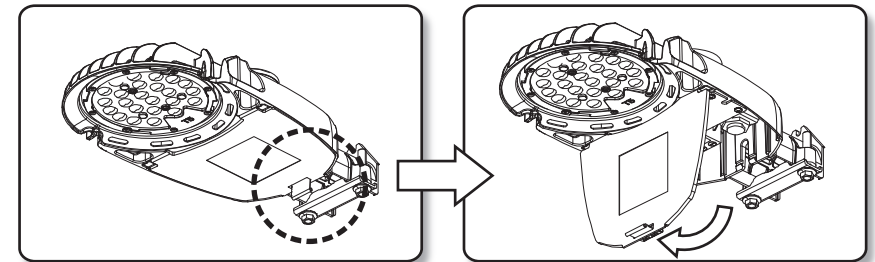

**3. Please read the wiring diagram below first and connect the power cables to the right position. Be sure to screw tightly to avoid disconnection.**

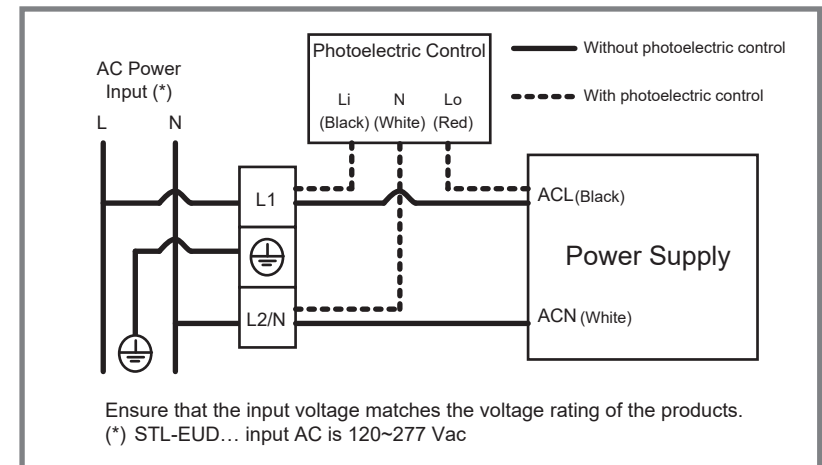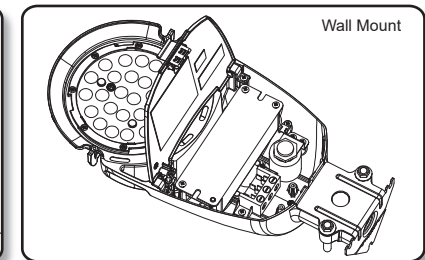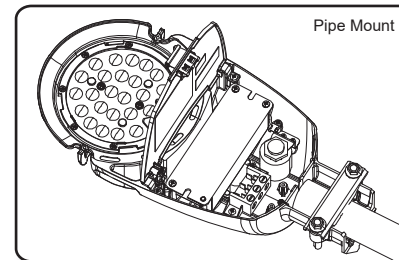

Wiring diagram